


# THEFT WARNING SYSTEM

## CIRCUIT DIAGRAM FOR QUICK PINPOINT CHECK

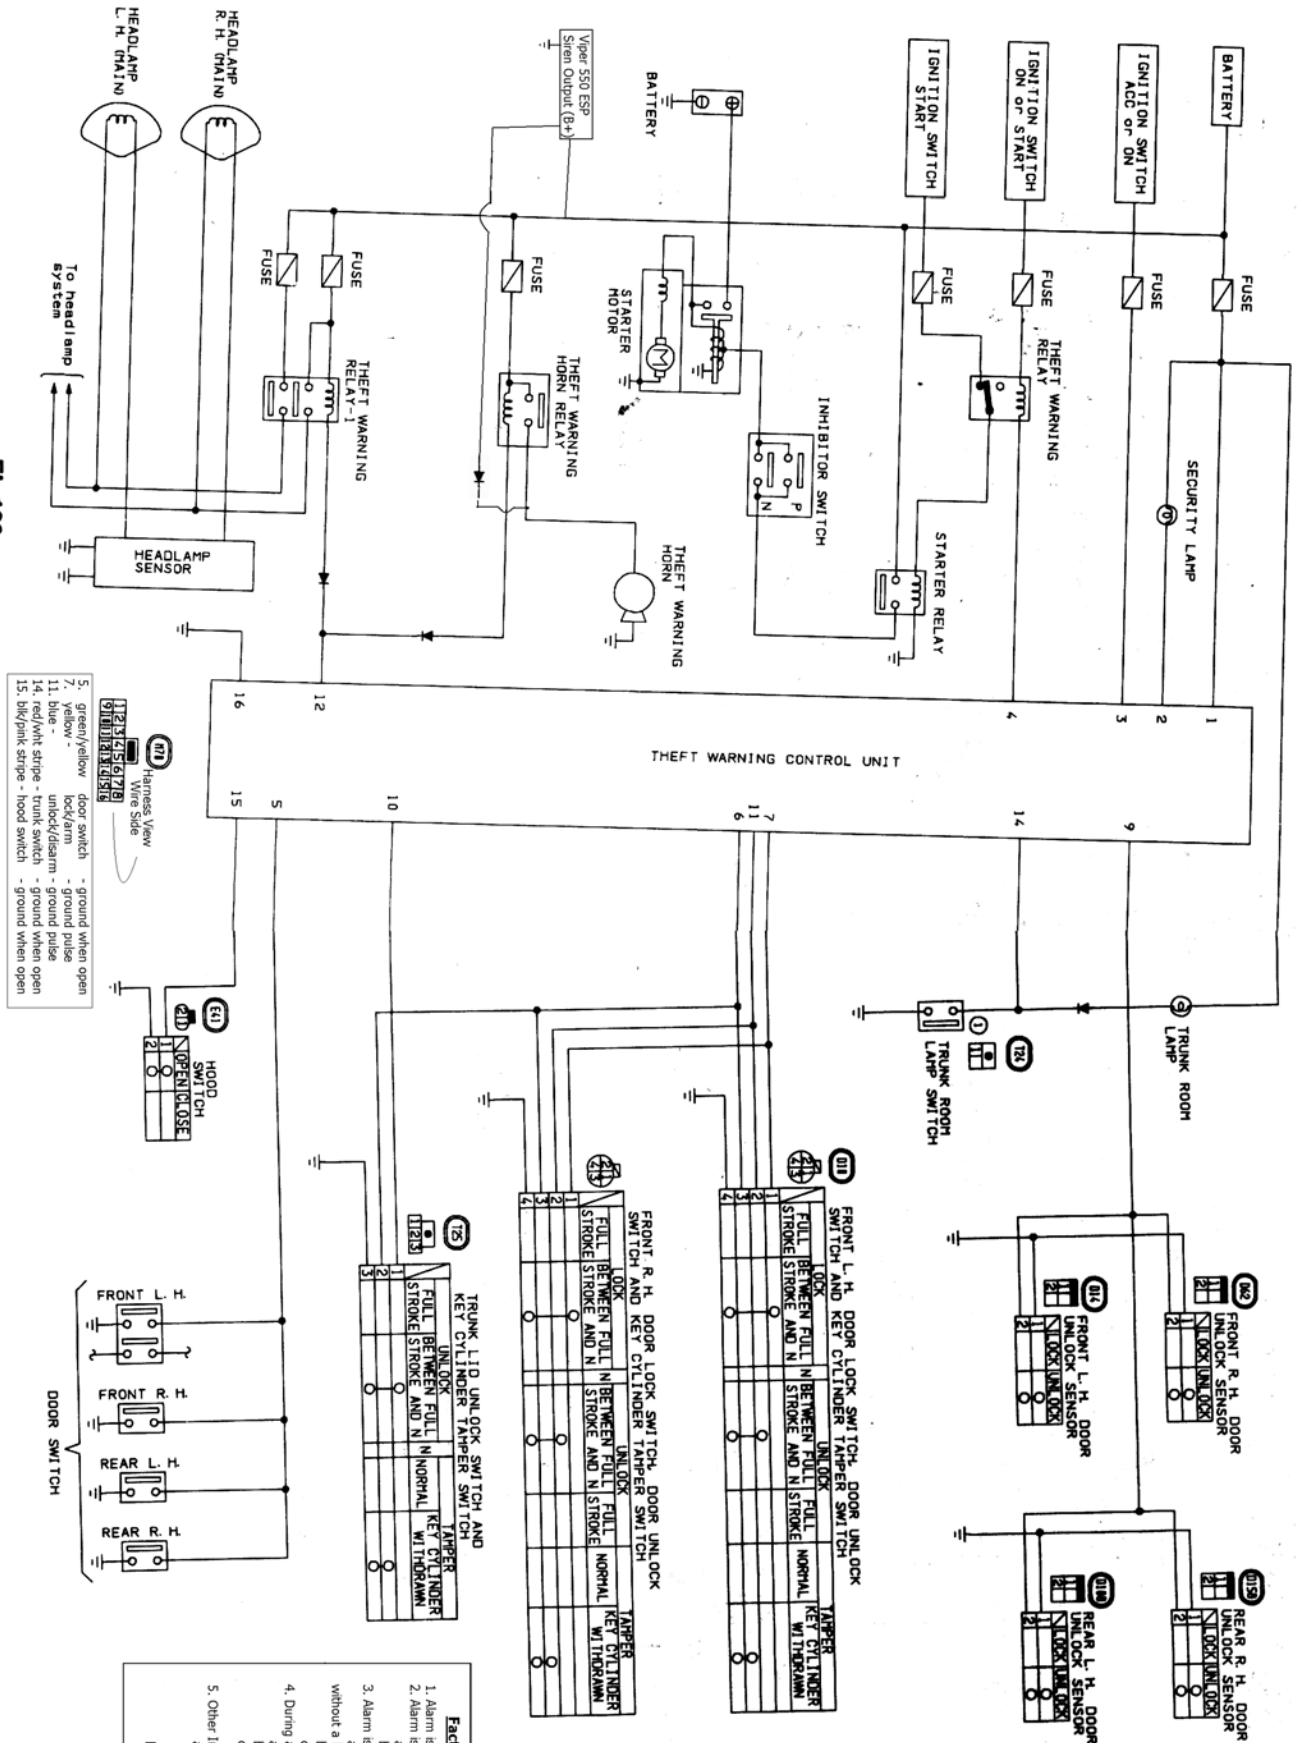

**Factory Alarm Logic**

- Alarm is armed by locking L/F door with key.
- Alarm is disarmed by:
  - unlocking L/F door with key
  - opening the accessory or run circuits
- Alarm is activated when:
  - locked and opened without a key in the L/F or R/F door.
  - hood is opened
  - trunk is opened without a key
- During an alert:
  - alarm horn sounds
  - headlamps flash (high beams only)
  - starter kill relay opens starter circuit (during alert only)
- Other Information:
  - Alarms arms 30 seconds after last door is closed and L/F door is locked with the key.
  - Dashboard light is on solid during this "pre-arm" cycle.